


Planiranje:


Uputstvo za montažu:

Pozicije rupa za montažu

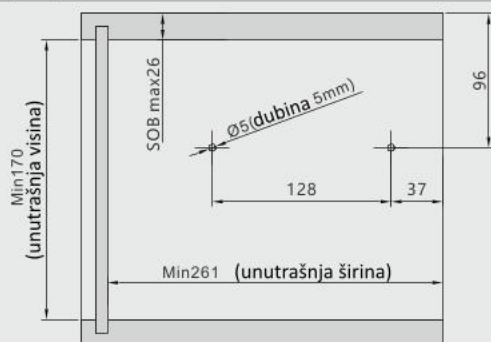


SOB: debljina ispune

Pozicija za montažu:

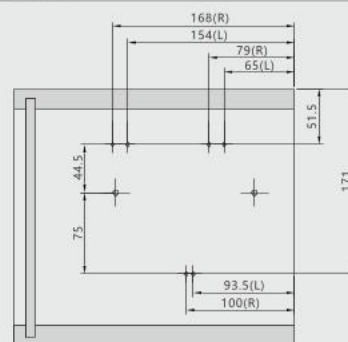

3xšrafovi Ø4X35mm

Planiranje i montaža - drvena vrata i široki alu ramovi

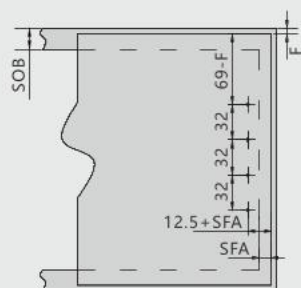


8 šrafova (Ø4X16mm)

8 šrafova sa upuštenom glavom (M4X11mm)

SFA: preklop vrata na bočnom panelu

F:razmak


Planiranje i montaža - uski alu ramovi

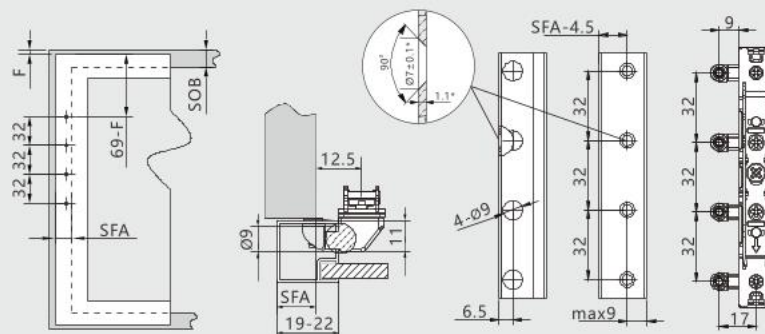

Širina rama(mm)	19	20	21	22
SFA(mm)	15~19	16~20	17~21	18~22


16 šrafova sa upuštenom glavom (Φ3.5X8.5mm)

Podešavanje fronta

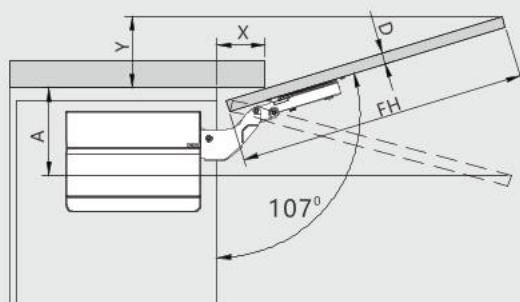


D(mm)	16	19	22	26	28
X(mm)	70	58	49	35	26
Ograničenje ugla otvaranja		Potreban prostor (mm)			
bez		$Y = FH \times 0.29 - 15 + D$			
100°		$Y = FH \times 0.17 - 15 + D$			
75°		$A = FH \times 0.26 + 15 - D$			

Minimalni razmak

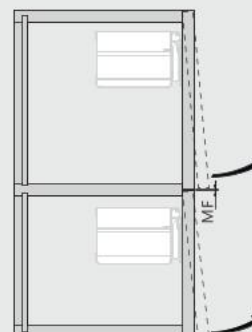


MF: minimalni razmak 2mm

Montaža

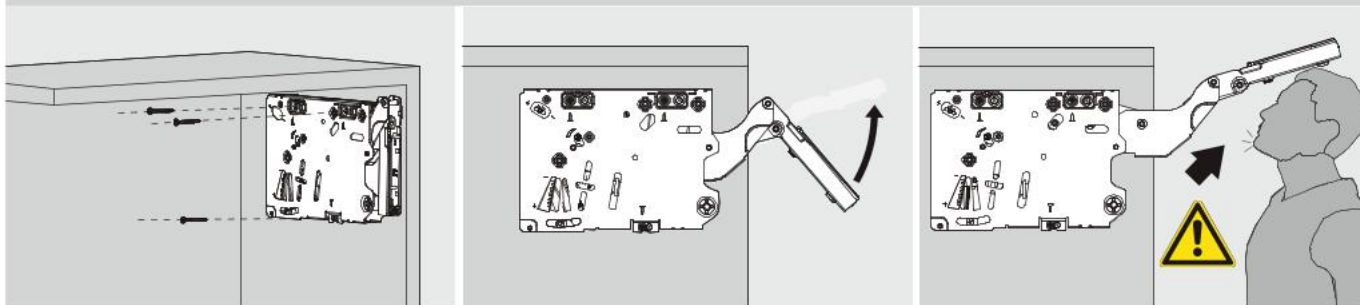


Oprezno pri otvaranju ruke mehanizma

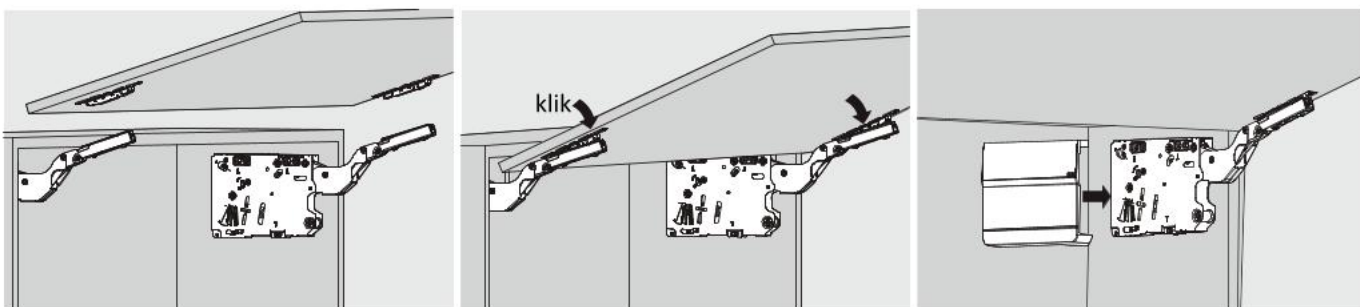


Montaža vrata

Podešavanje slobodnog položaja

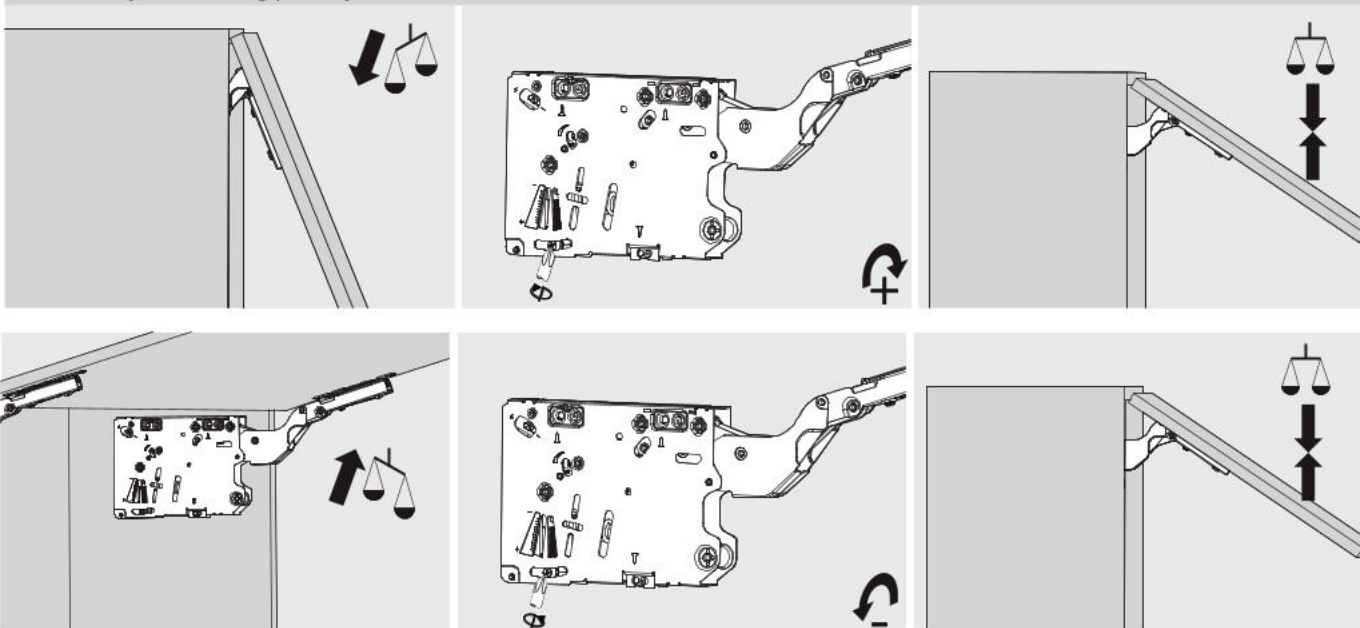


Podešavanje brzine zatvaranja

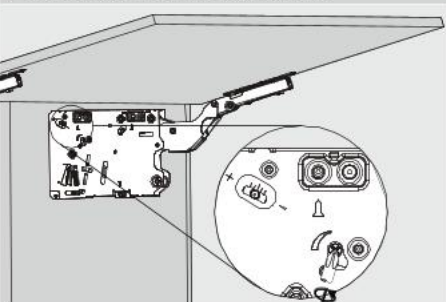


- "+" povećava vreme mekog zatvaranja (okrenite zavrtnjaj za podešavanje u smeru suprotnom od kazaljke na satu)
- "-" smanjuje vreme mekog zatvaranja (okrenite zavrtnjaj za podešavanje u smeru kazaljke na satu)

Podešavanje

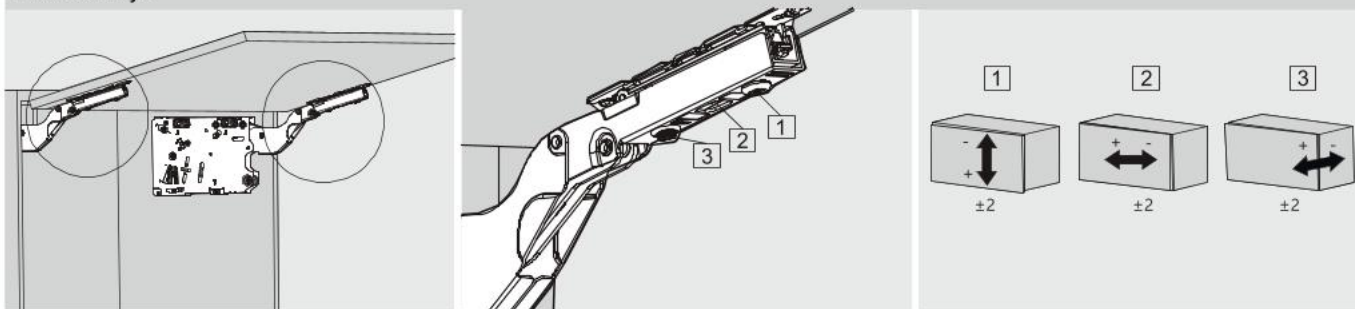


Uklanjanje

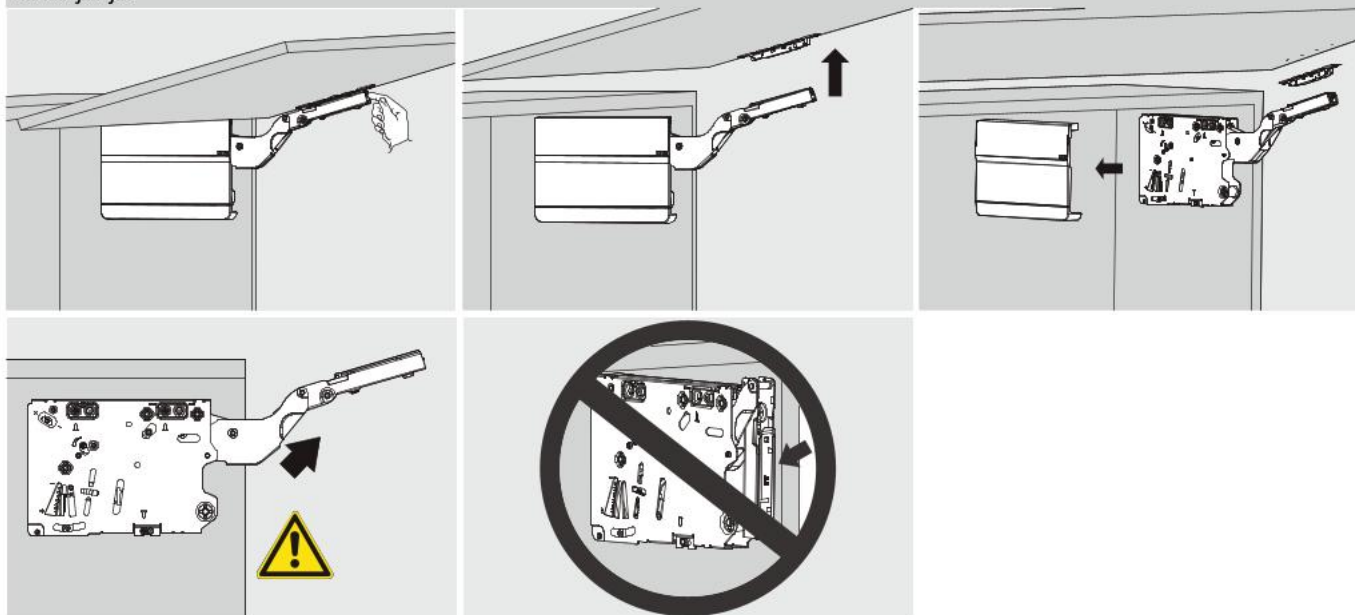

Nemojte gurati ruku mehanizma bez pričvršćenih vrata.

Graničnik otvaranja

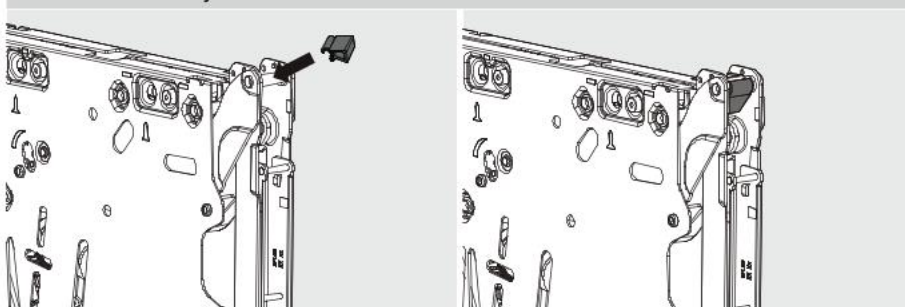

* Formula za izračunavanje faktora snage:

(visina (m) x širina (m) x težina/m² (kg)) x visina (mm)

Težina okvirno za materijale:

iverica - 13kg/m²

mdf - 15kg/m²

staklo u alu ramu - 13kg/m²